APPLICATIONS FOR SETTING HERO CONDITIONS

NALC	Ordnance	Situation/HERO Activity	Location	Condition
General Application				
All	HERO Safe	Presence, handling and loading	All	0
All	HERO UNSAFE ORDNANCE	Presence handling, and loading	Zone 1 Zone 2 Zone 3 Zone 4 Zone 5 Zone 6	1 2 3 4 4 4
All	HERO SUSCEPTIBLE ORDNANCE	Presence handling, and loading	Zone 1 Zone 2 Zone 3 Zone 4 Zone 5 Zone 6	5 5 5 6 6

Note:

- Zone 1 West of Hampton Boulevard (piers 1 through 6), from the southern border of the Station up to Admiral Taussig Boulevard.
- Zone 2 North of Admiral Taussig Boulevard up to Powhatan Street, west of Farragut Street (piers 7 through 9).
- Zone 4 Marina and heliport adjacent to Building LF-60
- Zone 5 Chambers airfield (excluding the magazine area).
- Zone 6 The magazine area.